


INSTALLATION INSTRUCTION


Snow guard



3 cm
[1 3/16"]

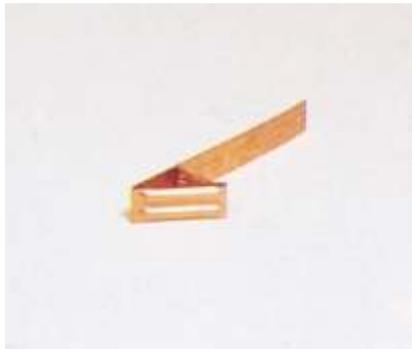

6 cm
[2 3/8"]




21,5 cm 6,5 cm
[8 1/2"] [2 5/8"]
27 cm
[10 5/8"]


The snow stops are installed over the joints. Fix them with 2 nails.

Horizontally staggered tiles

50 cm
[19 3/4"]

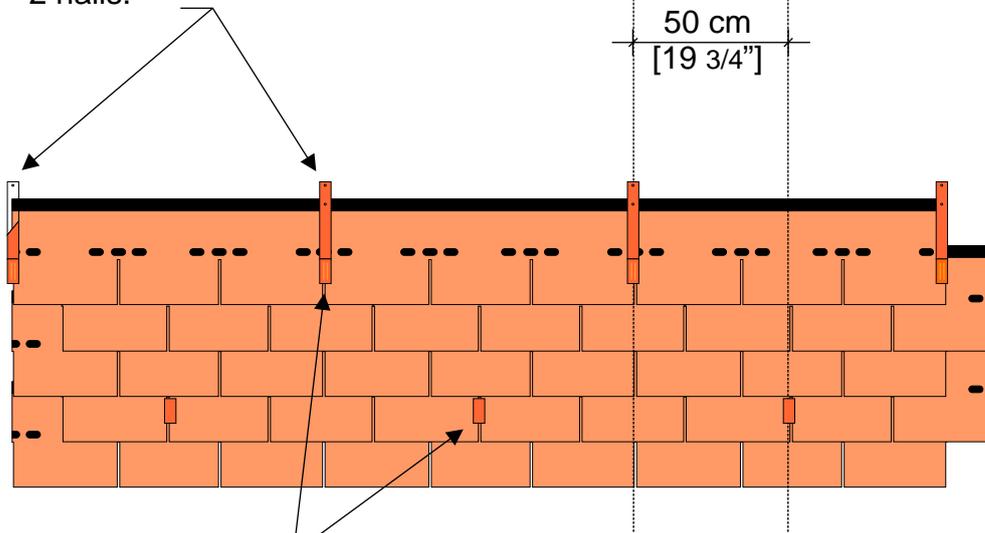

The snow stops are fixed every 3 or 5 rows of tiles

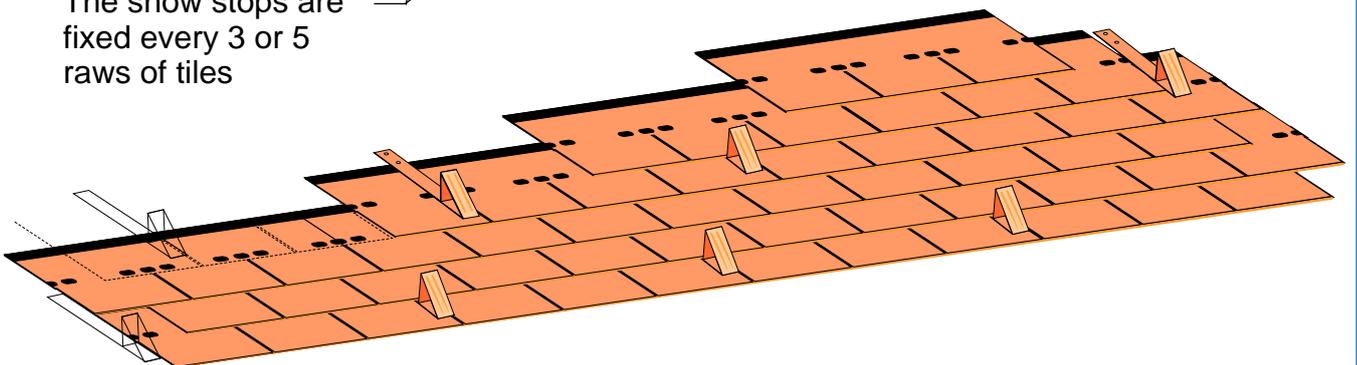

The drawing shows the position of snow stops every 3 rows of tiles, to obtain a density of snow stops of 2,33 pieces every m² (25 sq.).

The installation and the quantity depend on the resistance of each snow stop which is of 200 kg (440 lb).

On the following table you can see the density of snow stops for more rows, based on the above drawing.

Number of rows	3	5	7
Density m ²	2,33	1,4	1
sq.	25,1	15,1	10,7